

JUNYAN

窩陽實業有限公司
JUN YAN AUTO INDUSTRIAL CO., LTD.

總公司:台南市704文成路121號

HEAD OFFICE: 121, Wen-cheng Road, 704, Tainan, Taiwan

TEL: +886-6-2833866 TEL: +886-6-2812356

FAX: +886-6-2812359

E-MAIL: junyan.auto@msa.hinet.net

INSTRUCTIONS FOR VW Transporter T5 Head Lamp


①



ASSEMBLY

1. Find the holes of screw. (as the circles shown in picture 2)
2. There will be two screws (as picture 3) attached with piece of head lamp.
3. Take a screw and aim at the hole. When the lamp fits on the car. (as picture 4)
4. Screwing a screw into the hole steady. (as picture 5)


②

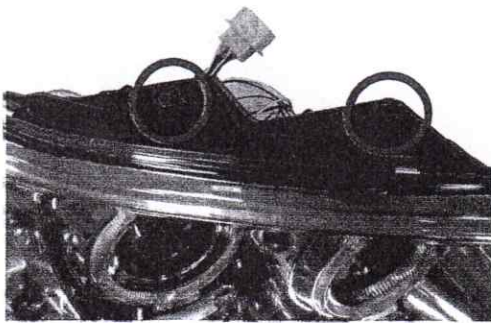


③



④





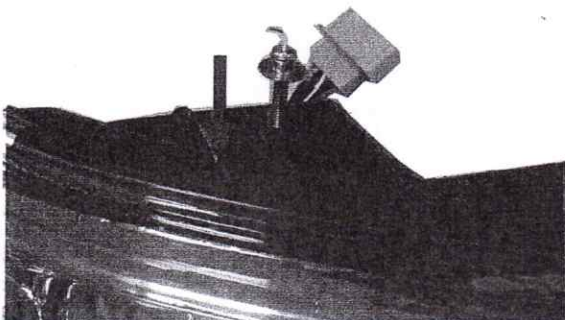


⑤

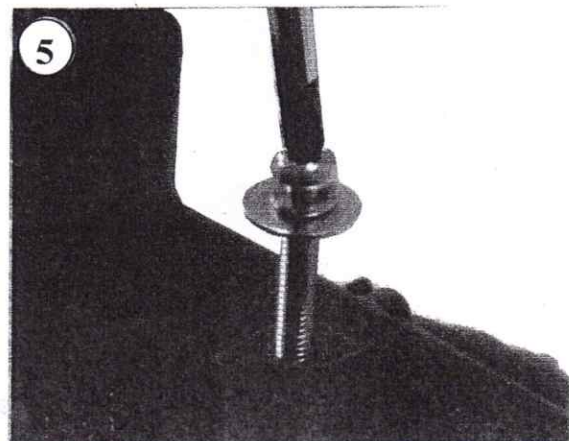

ASSEMBLY

1. There are 4 screw holes at bottom of lamp housing. (refer to circle shown in picture 1)
2. Find "bracket" (as picture 2) and "4 screws" (as picture 3) attaching in the box.
3. Assembling bracket onto the screw holes of bottom housing. (refer to picture 4)
4. Twist each screw into screw hole before assembling head lamp into the car. (refer to picture 5)
5. Completing all above steps, you may assemble head lamp to the car.

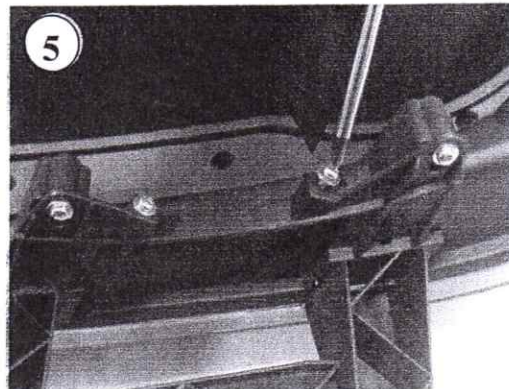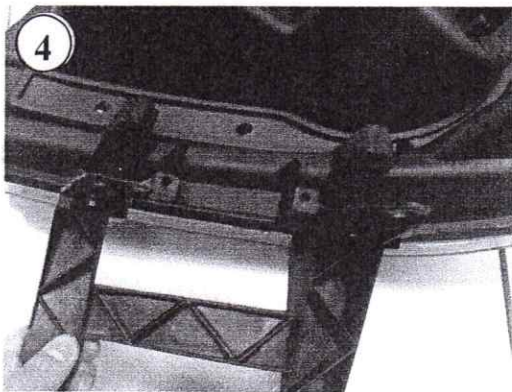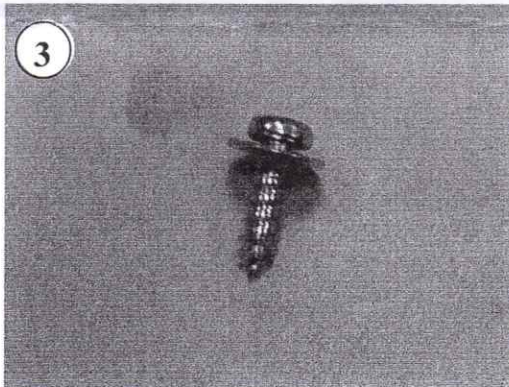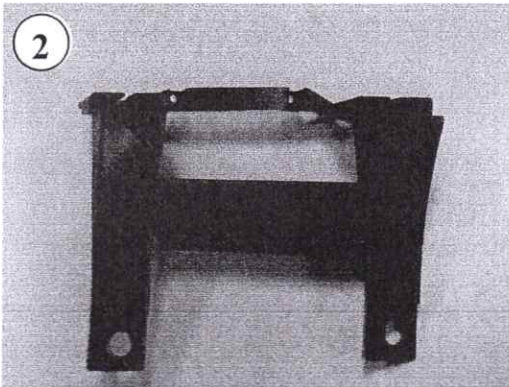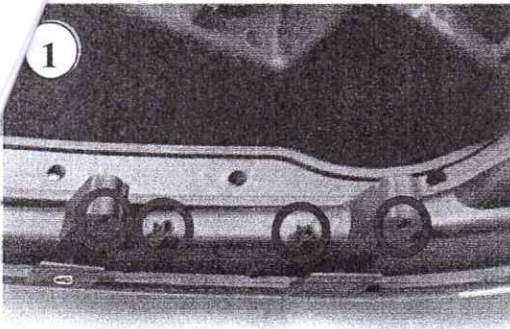

Instructions For Electric Adjustment Motor & Manual Adjustment

Definition:

E: It stands for using "original levelling motor" (OE motor).

EM: It stands for using "manual adjustment apparatus".

E1: It stands for using "JUN YAN electric adjustment motor"


For instance:

HU258E-00-1-E → Install "**OE motor**" and adjust up and down of Hi/Low beam.

HU341EM-02-1-E → Adjust up and down of Hi/Low beam by manual bolt.

HU353E1-02-1-E → Adjust up and down of Hi/Low beam by JUN YAN electric motor.


Situation I - Instruction for installing "OE motor" onto JUN YAN head light.

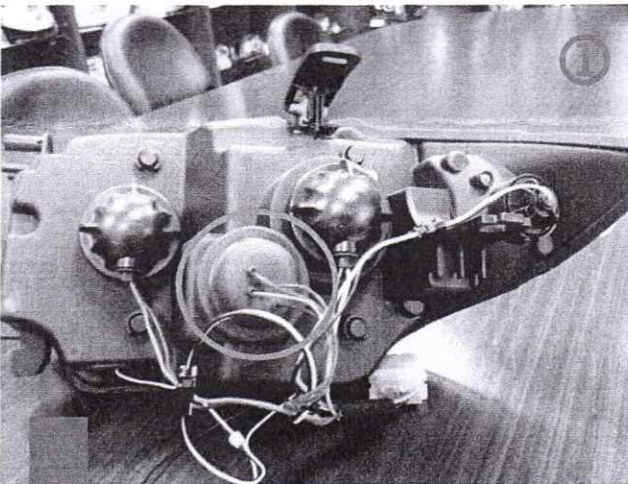

Example: HU258E-00-1-E

Picture 1:

Remove rubber cap from the levelling adjustment position.

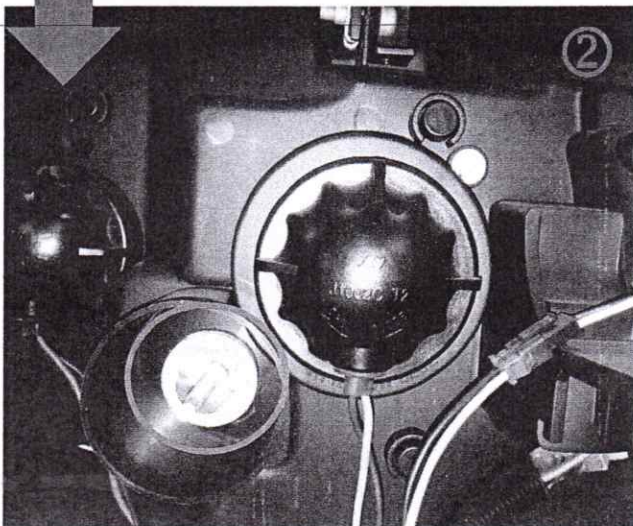

Picture 2:



Loose JUN YAN manual adjustment apparatus (bolt).




Picture 3:
OE electric adjustment motor

Picture 4:
Install OE electric adjustment motor into socket hole.

Picture 5:
Connect wires to power up the motor, then cover back the rubber-cap.

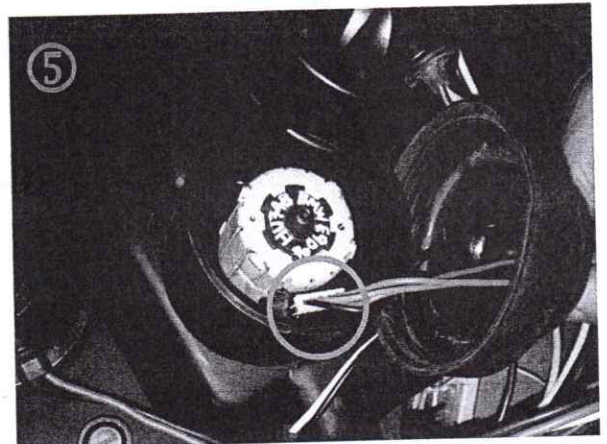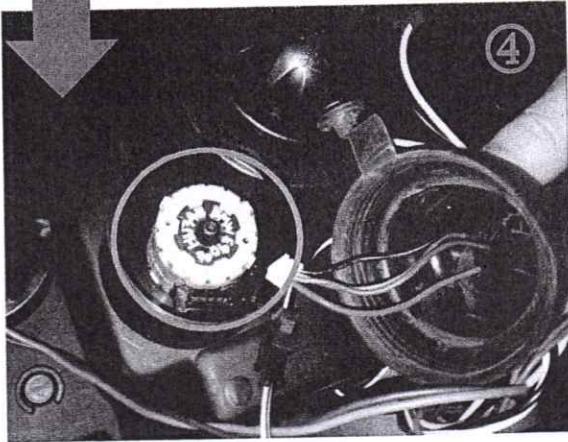


Situation II - Hi/Low beam adjustment by manual bolt.

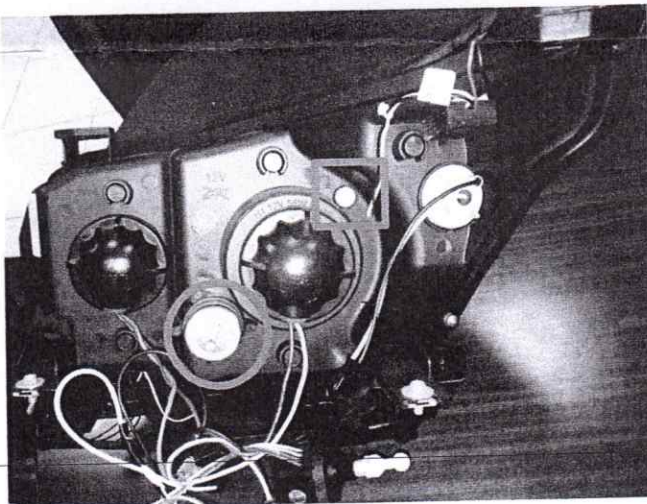

Example: HU341EM-02-1-E

The circle in picture on the left, there is one bolt that you can adjust up and down for the lighting angle and, in the meanwhile, adjustment screw in the square which is to adjust left and right. With two adjustment bolt and screw, you can adjust lighting angle aiming at the road properly.

Situation III - Hi/Low beam adjustment by JUN YAN electric adjustment motor.

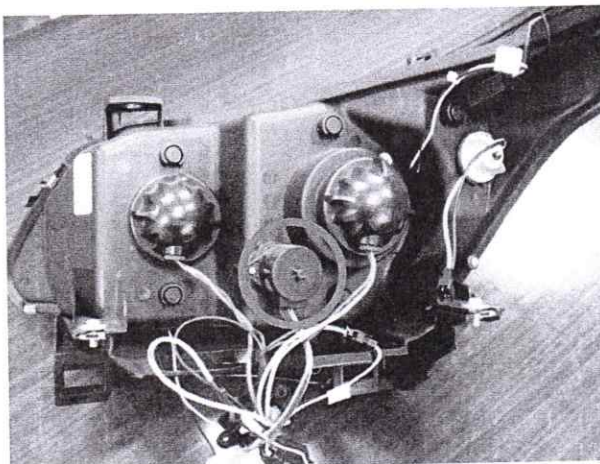

Example: HU353E1-02-1-E

When you buy "E1" type JUN YAN head lamp, the electric adjustment motor is basically equipped onto the head lamp already, so you can simply install the head lamp in car and adjust the lighting angle in the car as you need.