


HOW TO SWITCH THE MODE OF THE 3A3R TALLLIGHTS

1. Rotate the running light switch 5 times continuously between ON and OFF within 5 seconds. All lights will be off when action complete. please keep holding the brake pedal.
2. Then rotate the running light n times (n=mode number) to choose the mode you like.
 - Mode 1- Sequential Red;
 - Mode 2- Red Cursor Indicator;
 - Mode 3- Triple Red
 - Mode 4- Sequential Yellow;
 - Mode 5- Yellow Line;
 - Mode 6- Brake Light Flash
 - Mode 7- Normal Brake Light
3. Turn on the hazard light for 5 seconds and turn it off until the red light flash 5 times, it means the mode setting successfully. (Please keep holding the brake pedal during the mode setting)
4. Release the brake pedal, then turn tailights off and turn it on to check if the mode switch is completed.
 - Default turn signal mode: Sequential Red
 - Default brake light mode: Normal Brake Light

FUNCTION DESCRIPTION

2

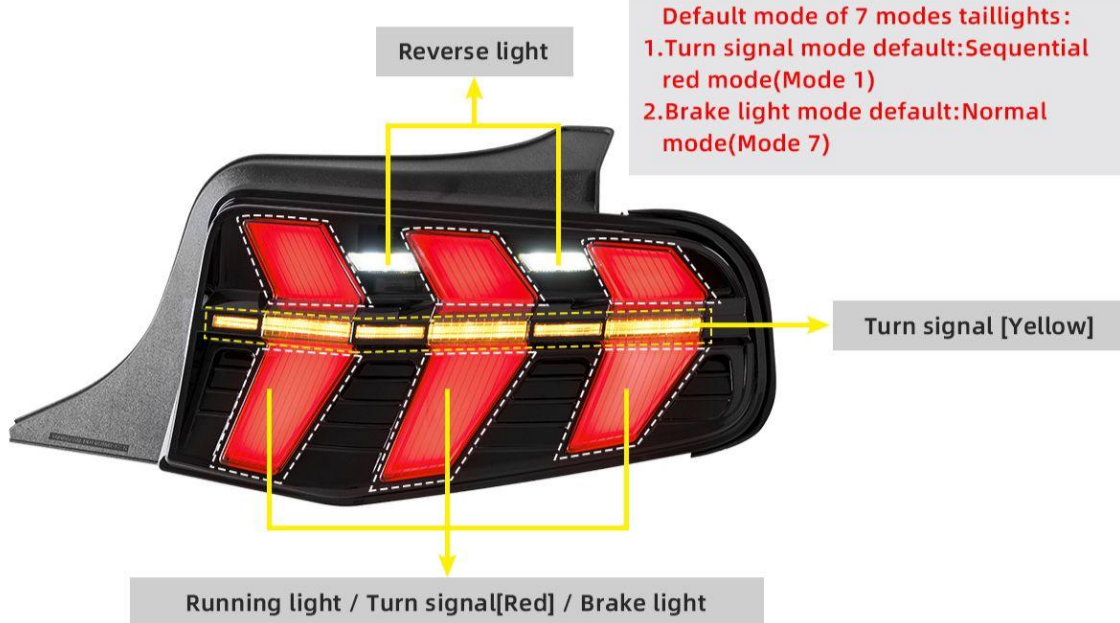


3

WIRING HARNESS DIAGRAM

THE PICTURE BELOW IS THE ASSEMBLY WIRING HARNESS



UPPER BRAKE LIGHT ADAPTER CABLE

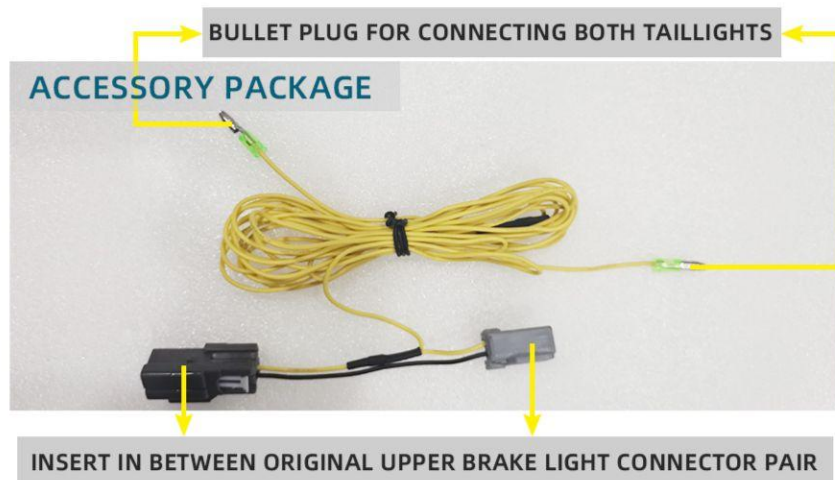

UPPER BRAKE LIGHT

PARAMETER INFORMATION

4

RATED VOLTAGE: 12V			
RUNNING LIGHT POWER	1.8W	YELLOW TURN SIGNAL	LINE: 5W SEQUENTIAL: 5W
BRAKE LIGHT POWER	NORMAL: 12W FLASH: 12W	RED TURN SIGNAL	TRIPLE: 12W SEQUENTIAL: 12W CURSOR : 3.9W
REVERSE LIGHT POWER	1.9W	SUITABLE YEAR	2010-2012

