### Commodity instructions

Article number: YX8099

*Name of commodity*: 15 Honda XRV pedal

*Fit modelst*: 15 Honda HR-V



Matters needing attention:

= The specification of all the pictures are for reference only,

Pictures and objects may be different, But the installation

Method is the same.

- In order to facilitate the, Please read the instructions before Installing the goods, The installing should pay attention to the Surface protection of your car, Avoid scratching.
- ⇒ All accessories please regularly to check with the car connection
  Is loose, To ensure safety, Regular cleaning pedap make it last.

#### <u>—</u>. Function and characteristics

- ⇒ Convenient installation, Need not bottom punch, Only need to use The original hole bottom can be installed.
- ≒ The design is exquisite, Perfect fit with the body, Superior Quality.

Serial number	Parts name	quantity	Specifications	Icons
(1)	The pedal body	2	Symmetrical	
			each one	- I I I I I I I I I I I I I I I I I I I
(2)	Front and middle	4		0 5
	support			
(3)	Rear bracket	2		
(4)	Hexagon flange bolts	20	M8*20	
(5)	Six angle flange nut	4	M8	
(6)	Flat washer	20	M8	
(7)	Spring washer	20	M8	
(7)	Cross recessed pan	4	M5*15	
	head tapping screws			
(8)	White clip	26		

#### 

# Left pedal installation procedure

(1) Step 1: refer to the spare parts list and accessories drawing to

see if the spare parts are complete and clear.

(2) The Second step: the original car side skirt with special tools to take off, as shown in Figure 1.

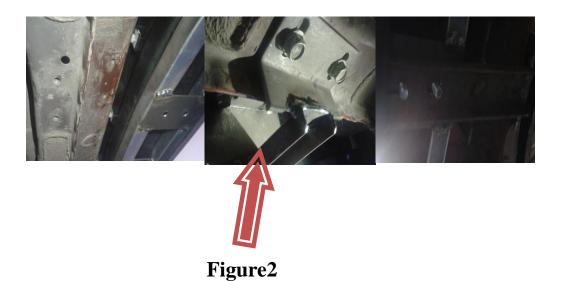


Figure 1


③ The Third step: remove the white clips in the accessory bag and place it in the clamping slot corresponding to the pedal

(4) The Fourth step: the placement of the clip of the pedal, the original car card slot position, buckle in the body.

(5) The Fifth step: after the installation of the first bracket, the original car hole position, the pedal and the bracket for the connection M8\*20 bolt from the top through the support hole, with M8 nut fixed As shown in the following figure 2.



(6) The Sixth step: before the installation, support, support: for the general case, the middle bracket borrow the original car hole as shown in the figure 3 (pictured on the right side of the pedal), borrow the original car front bracket holes as shown (pictured on the right side of the pedal)

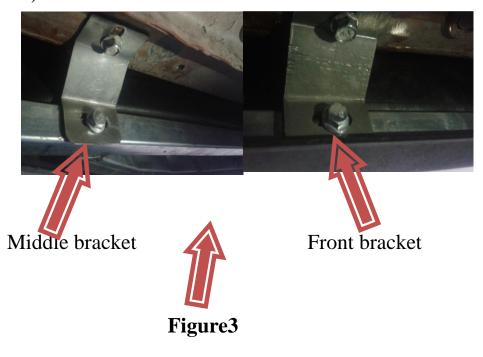

(7) The Seventh step: adjust the position of the pedal before and after, with the self tapping screw to the front and rear fender and the original car skirt fixed position of the body fixed connection, the pedal bracket bolt all tight.

(8) Eighth step: use the same method to install the other side of the pedal.

## **Pedal installation effect diagram**

