

Running Boards Side Steps suitable for BMW X5 G05 (2018 -up)

Code RBBM08



To facilitate your installation, please read the product instruction manual carefully before installation.




Step 1: Remove the original side skirts of the car (pictures 1, 2, 3)



Picture 1



Picture 2

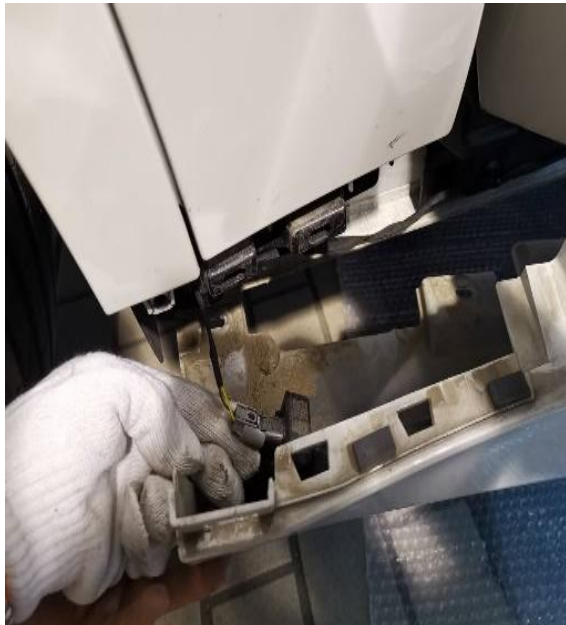

Picture 3

Step 2: Remove the LED plug also (picture 4)

Running Boards Side Steps suitable for BMW X5 G05 (2018 -up)

Code RBBM08



Picture 4

Step 3: Take off the LED lights and nuts on the inner front end of side skirt and then install them on the inner front end of the running boards (pictures 5, 6)



Picture 5

Running Boards Side Steps suitable for BMW X5 G05 (2018 -up)

Code RBBM08



Picture 6

Step 4: Take off original brackets

Step 5: Fix the bracket of the running boards (picture 7)



Picture 7

Step 6: Install the running board (connect the light wires first during installation)

Step 7: Check whether all screws are tightened and pack the tools.

Note: During installation, move the board slightly backward to avoid the front edge of the board skirt hitting the door.

Once in place, slide it forward to the proper position and press it tightly.

Then secure the screws connecting the running board to the underside of the car

Step 8: Repeat on the other side

Disclaimer: Our company is not responsible for any related problems and losses caused by improper installation and use.

Running Boards Side Steps suitable for BMW X5 G05 (2018 -up)

Code RBBM08

