


# Mercedes Benz W463 G-class G500 G550 G55 G63 AMG


V-200201/V-200202

**Note:** Please read this instruction before you begin the install operation. Incorrect installation will cause damage to your vehicle. If you are not about any step in this instruction, please contact your dealer or ask help from a professional mechanic.

1. Take off the stock tail lamps, by removing the two screws on the two corners of the tail lamps.

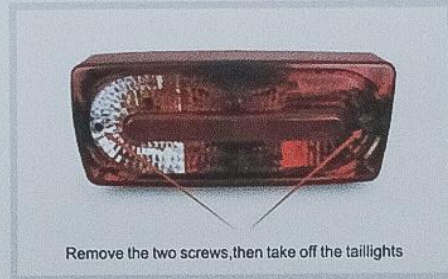

2. Now you will see the exposed bulbs, remove the original bulbs and the stock black plastic housing.

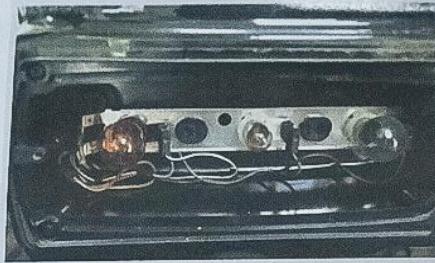

3. Mount the two extension brackets onto the exposed tail lamp metal plate, using the outer two holes for one side of the bracket, and the inner two holes on the other side of the bracket.

**\*\*\*Please note that the matt side of the bracket to the metal plate, and the smooth side of the bracket to the new tail lamps.**




4. Take off the black plastic gasket from the stock tail lamps, then insert it into the new LED tail lamps.



5. Connect the wires before you secure the LED taillights assembly.

Black wire to negative      Green wire to driving lights  
Red wire to brake lights      Yellow wire to turn signal lights

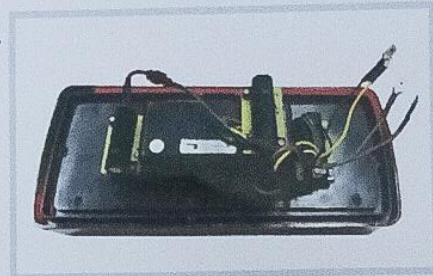

**Stock tail lamp cable comparison:**

Pre-facelift Tail lamp



Brown wire to negative positive pole  
Gray/Red wire to driving lights  
Black wire to brake lights  
Green/Black wire to turn signal lights

Facelift tail lamp



Brown wire to negative positive pole  
Gray/Black wire to driving lights  
Red/Black wire to brake lights  
White/Black wire to turn signal lights

6. Mount the new LED tail lamp onto the brackets via the center holes at the outer edges of the brackets.



PS: If you got the lamp with a switch as the bellow picture, it is to control the dynamic turn lights.

You can choose it with dynamic function or without dynamic function when you install it according to your country's government policy or yourself preference.

