

YAA-MTV-0351 大众凯路威车型2010-2015



0351: 12V时日行灯电流大亮600MA

小亮340MA

转向440MA


**12V电压下, 近光2.9A,
远光5.6A**

LED近光透镜


LED远光透镜

流光转向灯


日行灯 (带迎宾功能)

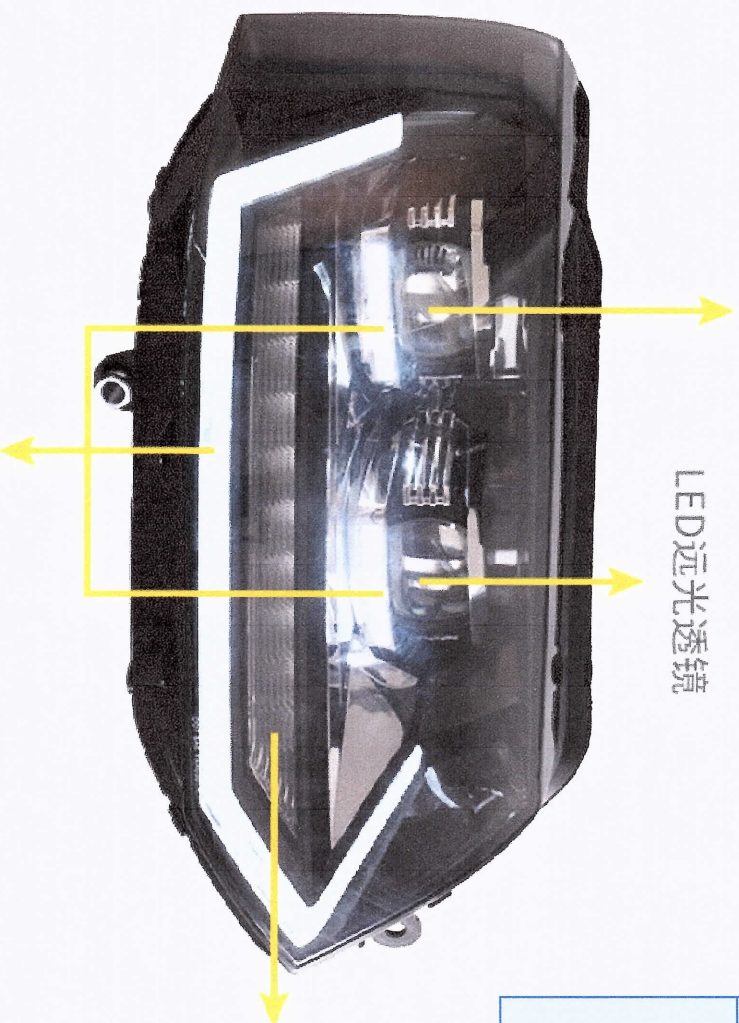

- 1.总负极
- 2.电机负极
- 3.电机电源
- 4.电机调节
- 6.日行大亮
- 7.近光灯
- 8.远光灯
- 9.转向灯

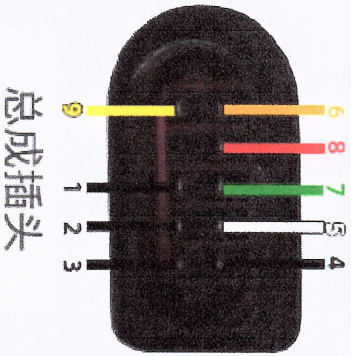


总成插头

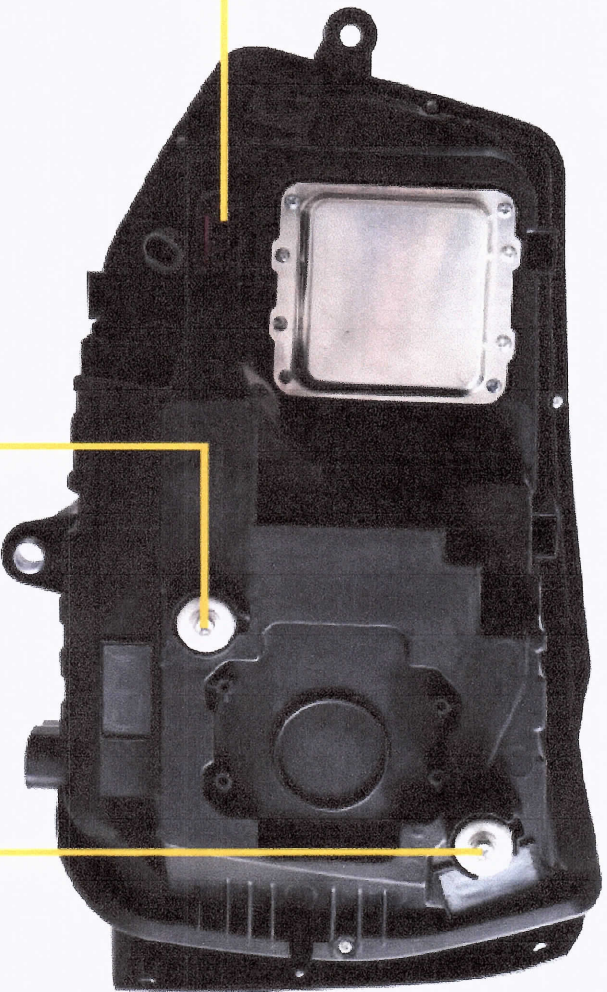


远近光上下调节螺杆
(R边顺时针下、逆时针上)

近光左右调节螺杆
(R边顺时针右、逆时针左)

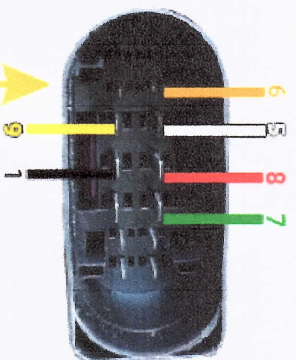

转接线束



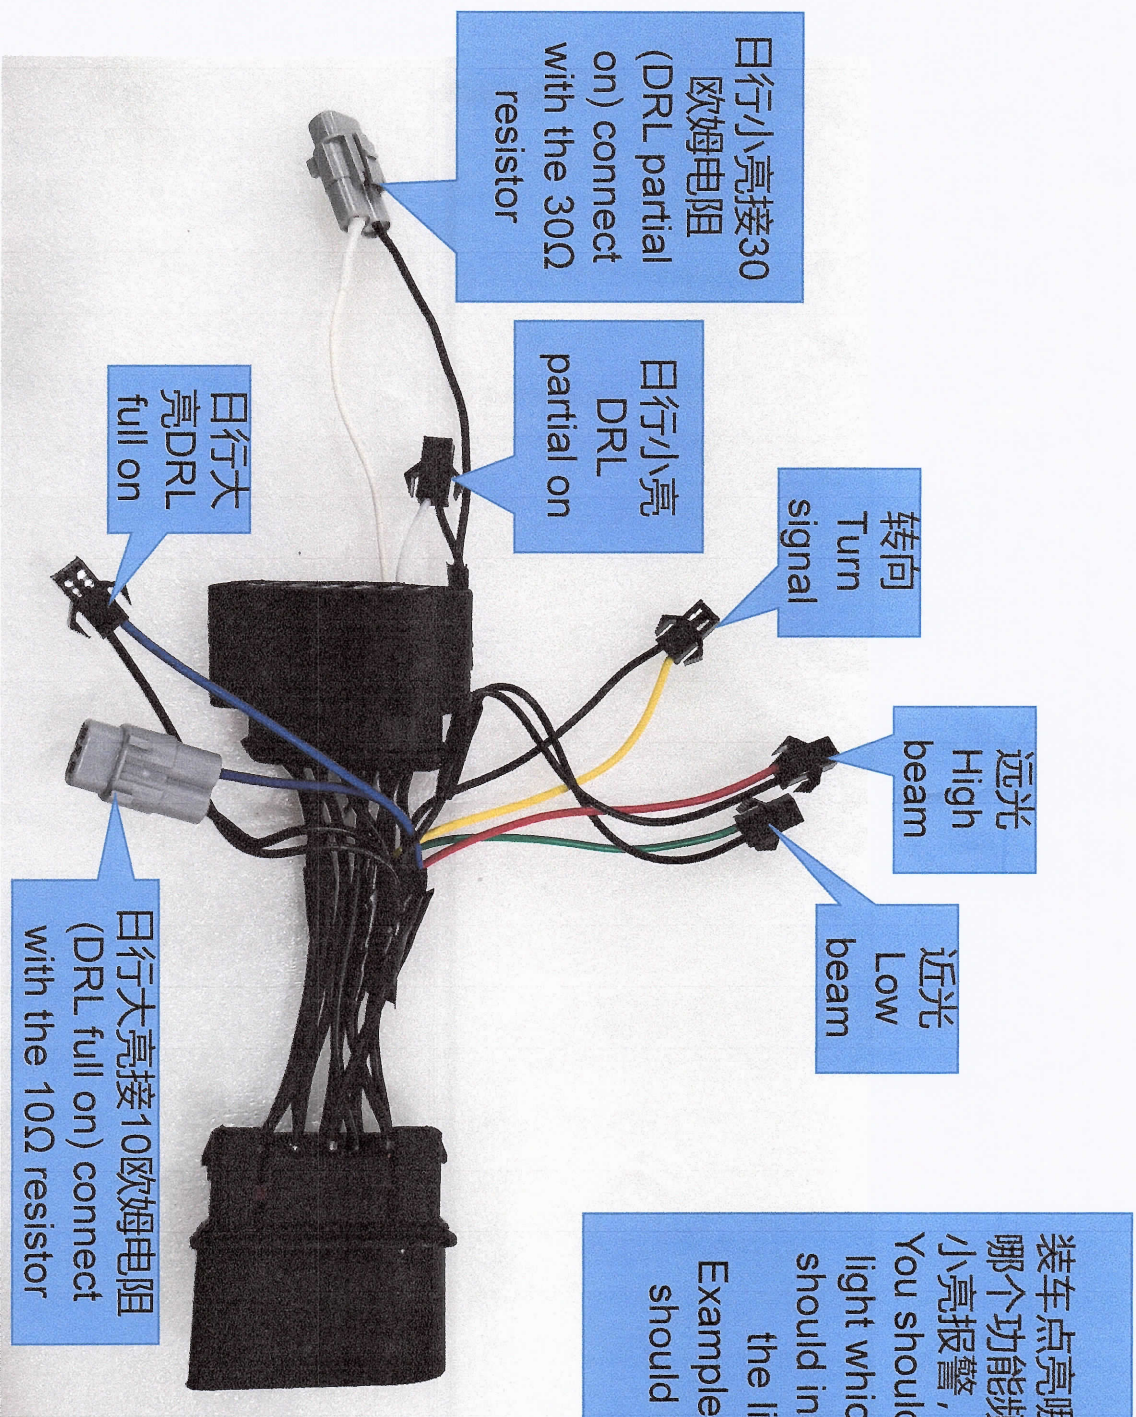


装车点亮哪个功能报警加假负载，哪个功能频闪加电容，例如日行灯小亮报警，日行灯接一个假负载。You should insert a resistor on the light which returns an error. you should insert an capacitance on the light which flashed.
Example: DRL returns error, you should insert a resistor on it.


一套灯需要准备的

Accessories prepared for one set of headlights


电容10个680UF
680UF capacitances*10

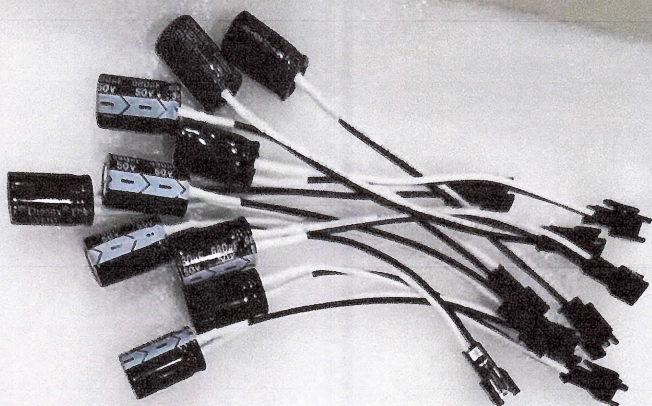

30欧姆假负载4个
30Ωresistors*4

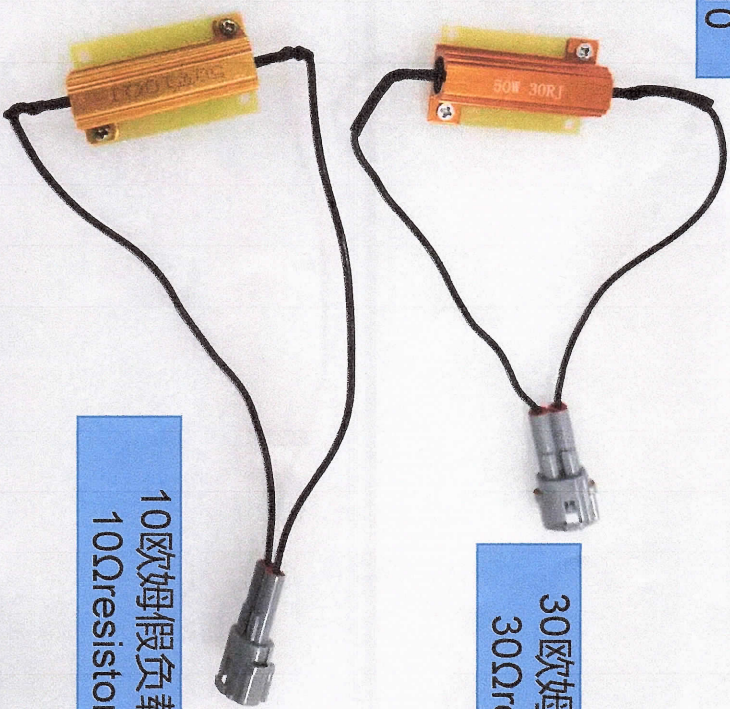

10欧姆假负载4个
10Ωresistors*4

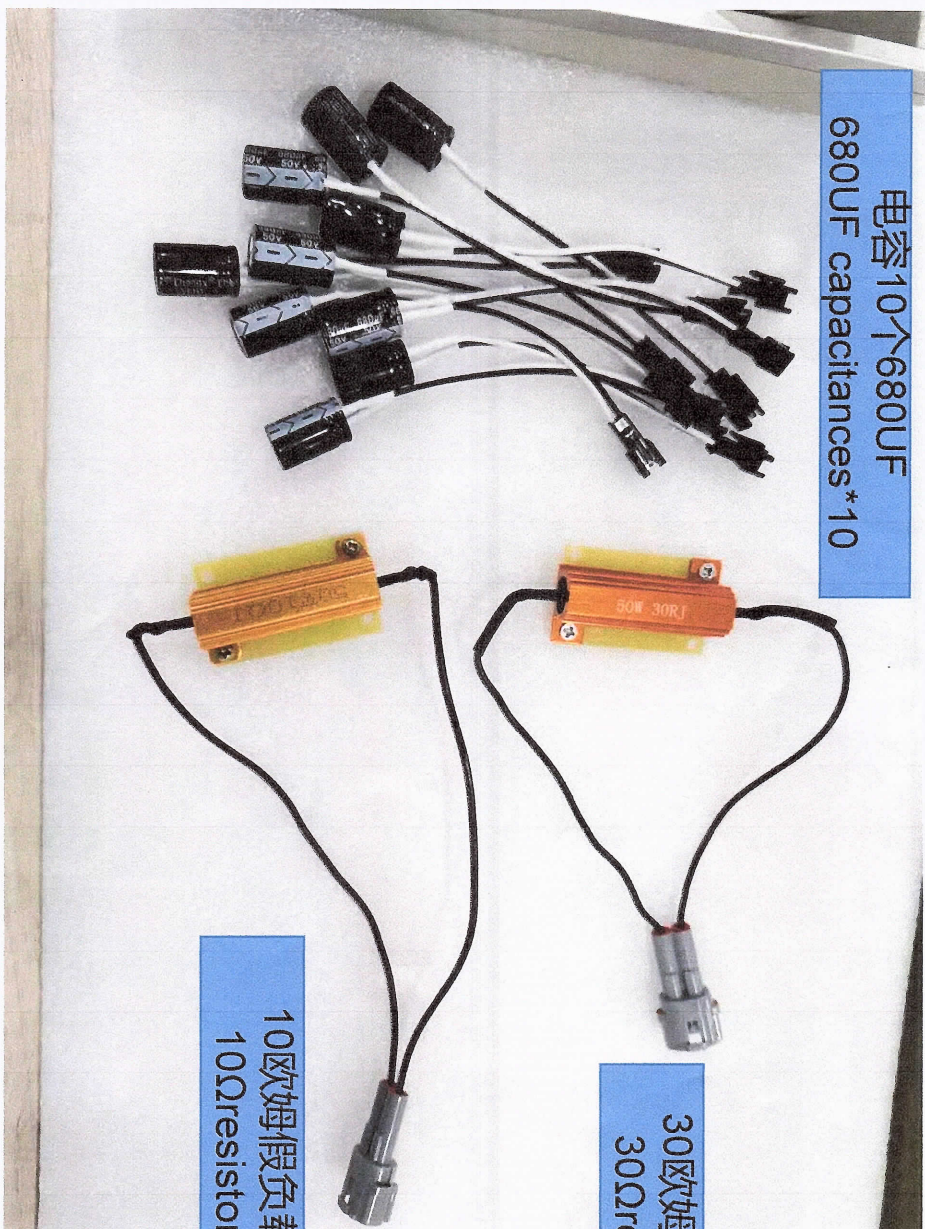

保险丝有大小2种，具体
看汽车实物适配哪种
There' s 2 size of
fuses,you should choose
which is suitable to your
car

大保险丝 0145A
Large size fuse 0145A

小保险丝 2042
Small size fuse 2042

