
Code RBMBGLEC167

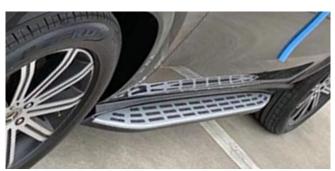

To facilitate your installation, please read the product instruction manual carefully before installation.

Accessories:

No.	Qty.	Details
1	2	Side step (left and right symmetry)
2	2	Brackets (left and right symmetry)
3	2	Covers
4	6	Clips
5	20	Nuts


Running Boards Side Steps suitable for Mercedes GLE Coupe C167 (2019-2023) Code RBMBGLEC167

Step 1: Refer to the accessories list to check whether the accessories are complete.

Step 2: Pry out the plastic clips at the front and rear of the original side skirt and keep them for later re-installation (as shown on photos below).



Step 3: Remove the plastic nuts from the underside of the original car and keep them for later re-installation (as shown on photos below).

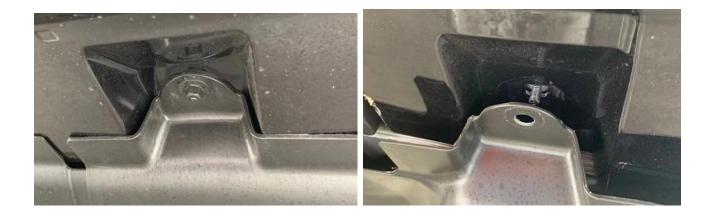

Running Boards Side Steps suitable for Mercedes GLE Coupe C167 (2019-2023) Code RBMBGLEC167

Step 4: Remove the original side skirts (remove front side and then end side, as shown on the photos below).




Step 5: Fix the inner trim of the side skirts on the side step (as shown on photos below).



Step 6: Take out the No. (2) bracket from the package and install it in the corresponding side holes, then secure it with No. (5) screws (while tightening, push the side skirt upward to facilitate the installation of the side

Running Boards Side Steps suitable for Mercedes GLE Coupe C167 (2019-2023)

step later). Finally, reinstall the original plastic nuts removed earlier. (as shown on photos below).

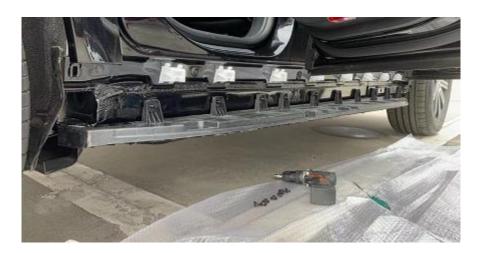

Step 7: Remove the white plastic clip at the front of the original side skirt and install it in the corresponding position on our No. (1) side step. (as shown on photos below)



Step 8: Install the No. (1) side step onto the vehicle body. After aligning the holes, first secure the lower clips by tapping them into place, then fix the upper part. Finally, re-install the plastic clips removed from the front and rear. (as shown on photos below)

Running Boards Side Steps suitable for Mercedes GLE Coupe C167 (2019-2023)

Code RBMBGLEC167



Step 9: Cover the secured side step with the No. ③ plastic small cover plate to complete the installation. (as shown on photos below)



Step 10: Repeat on the other side (The installation steps on the left and right are the same, only the installation method on the right is described.

Disclaimer: Our company is not responsible for any related problems and losses caused by improper installation and use.